LAVAMAT 11842 - 12843 VIT

User Manual

Washer-dryer

PERFEKT IN FORM UND FUNKTION

AEG

Electrolux

Downloaded From WashingMachine-Manual.com Manuals

Dear Customer

Thank you for choosing one of our high-quality products.

With this appliance you will experience the perfect combination of functional design and cutting edge technology.

Convince yourself that our appliances are engineered to deliver the best performance and control - indeed we are setting the highest standards of excellence.

In addition to this you find environmental and energy saving aspects as an integral part of our products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

The following symbols are used in this manual:

Important information concerning your personal safety and information on how to avoid damaging the appliance

General information and tips

Environmental information

Downloaded From WashingMachine-Manual.com Manuals

Contents

Instruction booklet 6

Safety information 6

Product Description 9

Detergent dispenser drawer 9

Control panel 10

- Display 11
- Indicator pilot lights 11

First use 13

Personalization 13

- Acoustic signal 13
- Child safety lock 13

Daily use - Washing 14

- Load the laundry 14
- Measure out the detergent and the fabric softener 14
- Select the required programme by turning the programme selector dial 14
- Select the SPIN speed or RINSE HOLD option 15
- Programme option buttons 15
- Select the STAIN option 16
- Select the TIME SAVING option 16
- Select the EXTRA RINSE 16
- Select the START/PAUSE 16
- Select the DELAY START 17
- Altering an option or a running programme 17
- Interrupting a programme 17
- Cancelling a programme 18
- Opening the door after the programme has started 18
- At the end of the programme 18

Downloaded From WashingMachine-Manual.com Manuals

Drying only 19
Select the drying programme by turning the programme selector dial 19
Select the drying time 19
At the end of the programme 20
Automatic washing and drying 20

Washing programmes 21

Programme information 23

Drying Time 24

Preparing the wash cycle 25
Sorting the laundry 25
Temperatures 25
Before loading the laundry 25
Maximum loads 25
Laundry weights 26
Removing stains 26
Detergents and additives 27
Quantity of detergent to be used 27
Degrees of water hardness 28

Preparing the drying cycle 28
Laundry not suitable for drying 28
Drying symbols label 29
Drying cycle duration 29
Additional drying 29

Care and cleaning 30
Descaling 30
After each wash 30
Maintenance wash 30
External cleaning 30
Detergent dispenser drawer 30

Downloaded From WashingMachine-Manual.com Manuals

Washing drum 31
Door seal 31
Drain pump 31
Water inlet filter 33
Emergency emptying out 33
Frost precautions 34

What to do if... 35

Technical Data 38

Consumption value 39

Installation 40
Unpacking 40
Positioning and levelling 42
Water inlet 42
Water-stop device 43
Water drainage 43
Electrical connection 44
Permanent connection 44
Building-in 45
Preparation and assembly of the door 45

Enviroment concerns 47
Packaging materials 47
Old machine 47
Ecological hints 47

Downloaded From WashingMachine-Manual.com Manuals

Instruction booklet

⚠ Safety information

Prior to using for the first time

- The safety of AEG/ELECTROLUX appliances complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes. You **MUST** read them carefully before installing or using the appliance.
- It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.
- You MUST read them carefully before installing or using the appliance.
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.
- If the appliance is delivered in the winter months when there are minus temperatures: Store the washer-dryer at room temperature for 24 hours before using for the first time.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature washing and drying programmes the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your washer-dryer to wash and dry articles with whalebones,

Downloaded From WashingMachine-Manual.com Manuals

material without hems or torn material.

- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

Installation

- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- If the appliance is installed in a location subject to frost, please read the **dangers of freezing** chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash and dry fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.

Downloaded From WashingMachine-Manual.com Manuals

- As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.
- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Never dry items that have had contact with chemicals such as dry cleaning fluid.These are of a volatile nature and could cause an explosion.
  Only dry items which have been washed in water or require airing.
- Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser drawer.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the washer-dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washer-dryer is accessible.

Child Safety

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum. To prevent children and pets becoming trapped inside the drum, the machine incorporates a special feature.
  To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical.

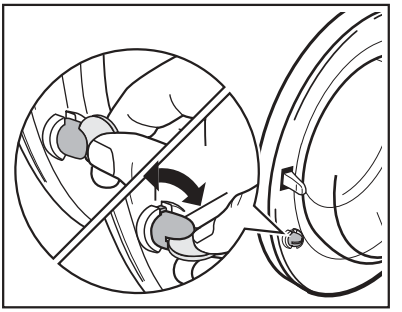

Downloaded From WashingMachine-Manual.com Manuals

Product description

Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption.

The **NEW JET** system allows total use of detergent and reduces water consumption therefore saving energy.

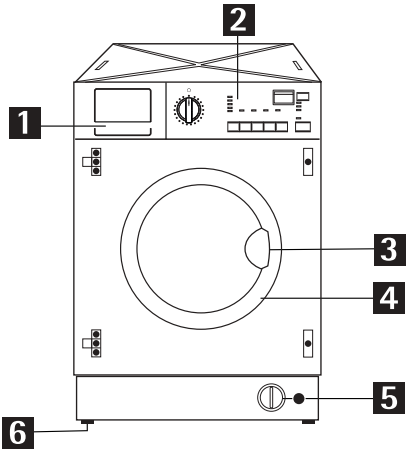

1 Detergent dispenser drawer
2 Control panel
3 Door opening handle
4 Rating plate
5 Drain pump
6 Adjustable feet

Detergent dispenser drawer

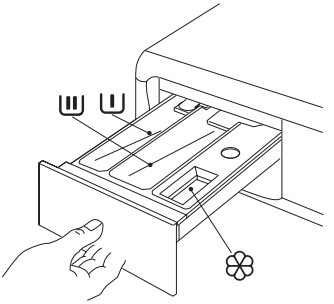

Compartment for prewash phase or stain remover .
The prewash detergent is added at the beginning of the wash programme. The stain remover is added at the proper time if the STAIN option is selected.

Compartment for powder or liquid detergent used for **main wash**.

Compartment for **liquid additives** (fabric softener, starch).

Downloaded From WashingMachine-Manual.com Manuals

Control panel

Below is a picture of the control panel. It shows the programme selector dial as well as the buttons, pilot lights and the display. These are represented by relevant numbers on the following pages.

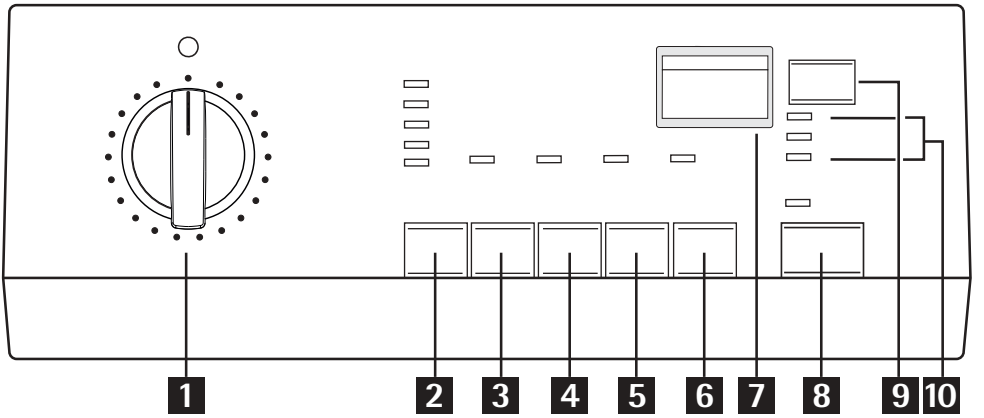

1. Programme selector dial
2. SPIN reduction button
3. STAIN button
4. TIME SAVING button
5. EXTRA RINSE button
6. DRYING TIME button
7. Display
8. START/PAUSE button
9. DELAY START button
10. Indicator pilot lights

Symbols key: = Cottons, = Prewash, = Synthetics, = Easy Iron Plus, = Delicates, = Wool, = Hand wash , = Cold, = Delicate Rinses, = Drain, = Spin, = Synthetics drying, = Cottons drying, = Refresh, **ECO** = Saving Energy programme, = Rinse Hold, = Stain, = Time Saving, = Extra Rinse, = Drying Time, = Start/Pause, = Door locked light, = Drying phase, = Washing phase, = Delay Start, = Remaining Time

Downloaded From WashingMachine-Manual.com Manuals

Display (7)

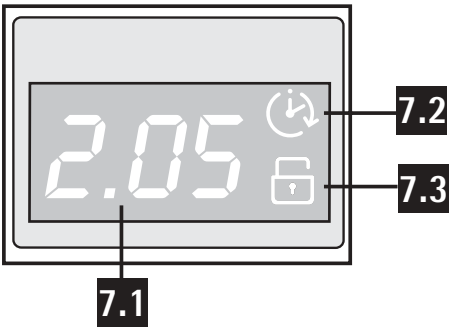

7.1 Duration of selected programme:

After selecting a programme, the duration is displayed in hours and minutes (for example *2.05*). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute.

Selected drying time

After selecting a drying programme, the drying time is displayed in minutes and/or hours (see paragraph «Drying only»).

After the programme has started the time remaining is updated every minute.

Alarm codes

In the event of operating problems, some alarm codes can be displayed, for example *E20* (see chapter «What to do if...»).

End of programme

When the programme has finished a blinking zero *0* is displayed, the FUNCTIONING pilot light (**10.1**) and the pilot light of button **8** go out and the door can be opened.

Incorrect option selection

If an option which is not compatible with the set wash programme is selected, the message **Err** is displayed for a few seconds and the yellow pilot light of button **8** light starts blinking.

Downloaded From WashingMachine-Manual.com Manuals

7.2 Delay Start (**7.2**)

The selected delay (20 hours max) set by means of the relevant button appears on the display for about 3 seconds, then the duration of the previously selected programme is displayed.

The symbol **7.2** will appear on the display. The delay time value decreases by one unit every hour. When only 1 hour remains, the time decreases every minute.

7.3 Child safety lock (**7.3**)

If your laundry is not removed during 10 minutes after the programme is finished, the backlight of the display switches off and the energy saving system will be enabled.

Only the pilot light of the button **8** is blinking to indicate that the appliance has to be switched off.

By pressing any buttons the appliance will come out from the energy saving status and you could set another washing programme or swich off the appliance.

Indicator pilot lights (10)

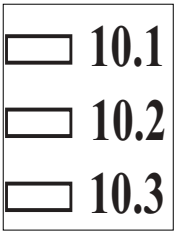

When selecting a washing programme, the FUNCTIONING pilot light (**10.1**) illuminates.

When selecting a drying programme the DRY pilot light (**10.2**) illuminates and stays on during the drying phase.

The DOOR pilot light (**10.3**) indicates if the door can be opened:

- light on: the door cannot be opened.
- light off: the door can be opened.

Downloaded From WashingMachine-Manual.com Manuals

First Use

Ensure that the electrical and water connections comply with the installation instructions.

Remove the polystyrene block and any material from the drum.

Run a cotton cycle at 90° or 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

Personalization

Acoustic signals

The machine is provided with the acoustic device, which sounds in the following cases:

- at the end of the cycle
- in the event of operating problems

By pressing the **3** and **4** buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except for the events of operating problems).

By pressing the same buttons again, the acoustic signal is reactivated.

Child safety lock

This device permits you to leave the appliance unsupervised without having the worry that children might be injured by or cause damage to the appliance.

This function remains able also when the washer-dryer is not working.

There are two different ways to set this option:

- before pressing button **8**: it will be impossible to start the machine.
- after pressing button **8** it will be impossible to change any other programme or option.

To enable (disable) this option press simoultaneously for about 6 seconds **4** and **5** buttons until the **7.3** symbol appears (disappears) on (from) the display.

Downloaded From WashingMachine-Manual.com Manuals

Daily Use

Load the laundry

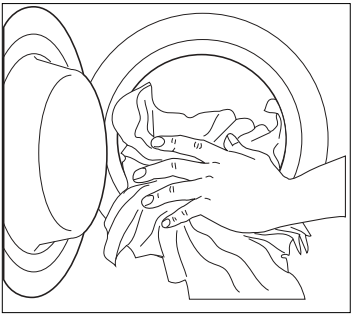

1. Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible.
2. Close the door firmly. You must hear a click during closing.
   Attention! Do not embed the laundry between the door and the rubber joint.

Measure out the detergent and the fabric softener

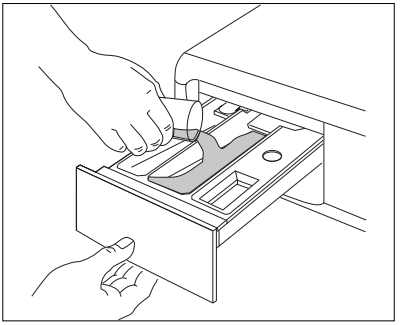

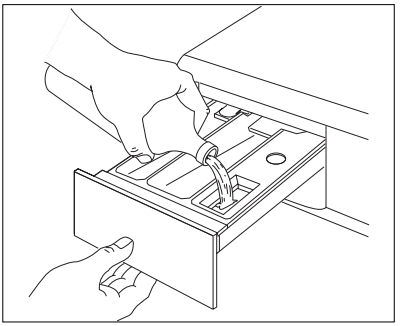

Your new appliance was designed to reduce water, energy and detergent consumption.

1. Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment II and, if you wish to carry out the **prewash** phase or STAIN action, pour the detergent or the stain remover into the compartment marked I.
2. If required, pour fabric softener into the compartment marked ❀ (the amount used must not exceed the **MAX** mark in the drawer). Close the drawer gently.

WASHING

Select the required programme by turning the programme selector dial (1)

You can choose the right programme for any type of laundry following the descriptions on the washing programme tables (see «Washing Programmes»).

Turn the programme selector dial to the required programme. The programme selector determines the type of washing cycle (e.g. water level, drum movement, number of rinses) and the washing temperature according to the type of laundry.

Downloaded From Washing-Machine.Manuals.com

The pilot light of button **8** starts blinking and the display shows the duration of the selected programme.

The selector dial can be turned either clockwise or anticlockwise. Position O/OFF corresponds to Reset programme/Switching OFF the machine.

At the end of the programme the selector dial must be turned to position O/OFF, to switch the machine off.

For the description of each washing programmes of the selector dial, consult the chapter «Washing programmes».

Attention!

If you turn the programme selector dial to another programme when the machine is working, the yellow pilot light of button **8** will blink 3 times and the message **Err** is displayed on the display to indicate a wrong selection. The machine will not perform the new selected programme.

Select the SPIN speed or RINSE HOLD option by pressing button 2

When the required programme has been selected, your appliance automatically proposes the maximum spin speed provided for that programme.

Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer.

RINSE HOLD: by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. At the end of the programme, a blinking «0» is displayed, the pilot light **10.3** and the light of the Rinse Hold option remain lit, the pilot lights **10.1** and the pilot light of button **8** go off and the door is locked to indicate that the water must be emptied out.

RINSE HOLD is not selectable with a NON -STOP programme (see Drying section).

To empty out the water, please read chapter «At the end of the programme».

Programme option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before pressing button **8**.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

If an incorrect option is selected, the yellow pilot light of the button **8** flashes for 3 times and the **Err** message appears on the display for some seconds.

For the compatibility between this option and washing programmes consult the chapter «Washing programmes».

Downloaded From WashingMachine-Manual.com Manuals

Select the STAIN option by pressing button 3

Select this option to treat heavily soiled or stained laundry with stain remover (extended main wash with time optimised stain action phase).

This option **is not** available with a temperature lower than 40°C.

Attention! If you wish to perform a programme with the stain option, pour stain remover into compartment II. STAIN option is not selectable with a prewash phase.

Select the TIME SAVING option by pressing button 4

This option allows you to modify the washing time, automatically proposed by the washer-dryer.

DAILY: by pressing this button once, the corresponding pilot light illuminates and the washing duration will be reduced to wash daily soiled laundry.

SUPER QUICK: by pressing this button twice, the corresponding pilot light remains lit, the washing duration will be reduced to wash lightly soiled laundry or items that have been used or worn for a short time. On the display will be visualized the decreased washing time.

Select the EXTRA RINSE option by pressing button 5

This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water (extra rinse).

This option can be selected with all the programmes except the wool and handwash.

The washing machine will perform some additional rinses.

Select the START/PAUSE by pressing button 8

To start the selected programme, press this button, the corresponding red pilot light stops blinking. The pilot light **10.1** is on to indicate that the appliance is operating.

The pilot light **10.3** is on to indicate that the door is locked.

To interrupt a programme which is running, press button **8**: the corresponding red pilot light starts blinking.

To restart the programme from the point at which it was interrupted, **press** button **8 again**. If you have chosen a delayed start, the machine will begin the countdown. If an incorrect option is selected, the yellow pilot light of the button **8** blinks for 3 times the message **Err** is displayed for a few seconds.

Downloaded From WashingMachine-Manual.com Manuals

Select the DELAY START by pressing button 9

Before you start the programme, if you wish to delay the start, press button **9** repeatedly, to select the desired delay. The corresponding symbol will appear on the display.

The washing programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by pressing this button.

The selected delay time value will appear on the display for a few seconds, then the duration of the programme will appear again.

You must select this option after you have set the programme and before you press button **8**. You can modify or cancel the delay time at any moment, before you press this button.

The door will be locked throughout the delay time. If you wish to add laundry in the machine during the delay time, press button **8** to set the machine to pause. Add the laundry, close the door and press button **8** again.

Selecting the delayed start:

- Select the programme and the required options;
- Select the delay start;
- Press button **8**: the machine starts its hourly countdown. The programme will start after the selected delay has expired.

Cancelling the delayed start after having started the programme:

- set the washing machine to PAUSE by pressing button **8**;
- press button **9** once until the symbol *0'* is displayed;
- press button **8** again to start the programme.

Important!

The Delay start cannot be selected with DRAIN programme.

Altering an option or a running programme

It is possible to change some option before the programme carries it out. Before you make any change, you must pause the machine by pressing the button **8**. Changing a running programme is possible **only by resetting it**. Turn the programme selector dial to O/OFF and then to the new programme position. Start the new programme by depressing button **8** again. The washing water in the tub will be not emptied out.

Interrupting a programme

Press button **8** to interrupt a programme which is running, the corresponding light starts blinking. Press this button again to restart the programme.

Downloaded From WashingMachine-Manual.com Manuals

Cancelling a programme

Turn the selector dial to O/OFF to cancel a programme which is running. Now you can select a new programme.

Opening the door after the programme has started

First set the machine to pause by pressing button **8**. If the pilot light **10.3** goes off, the door can be opened.

If the pilot light **10.3** remains on and the door is locked, this means that the machine is already heating or that the water level is too high. In this case the door cannot be opened.

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to O/OFF. After a few minutes the door can be opened **(pay attention to the water level and temperature!)**. After closing the door, it is necessary to select the programme and options again and to press button **8**.

At the end of the programme

The machine stops automatically, the pilot light of button **8**, the pilot light **10.1** or **10.2** and **10.3** go off and a blinking *0* will appear on the display. Some acoustic signals sound. The door can be opened.

If a programme or an option that ends with water still in the tub has been selected, the pilot light **10.3** and the light of the Rinse Hold option remain lit and the door is locked to indicate that the water must be emptied out before opening the door.

Follow the instructions below to empty out the water:

- turn the programme selector dial to O/OFF
- select the DRAIN or SPIN programme
- reduce the spin speed if needed, by pressing the relevant button
- press button **8**
- when the programme has finished the display shows a blinking *0*. The door can now be opened.

Turn the programme selector dial to O/OFF to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant

Downloaded From WashingMachine-Manual.com Manuals

DRYING only

The recommended loads size is 3 kg for cottons and linen, and 2 kg for synthetics. **Note! It is possible also to dry up to 4 kg of cotton items (see the drying time table).** The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.

Select the drying programme by turning the programme selector dial (1)

Turn the programme selector dial to the required programme for Cottons or Synthetics in the Drying sector. The pilot light **10.2** illuminates.

Select the drying time by pressing button **6**

With this button is possible to select the duration of the drying cycle according to the type of fabric (cotton or synthetic). Press button **6**, until the time you want appears on the display.

For **Cottons** you can select a drying time from 10 minutes to 250 minutes (*4.10*). For **Synthetics** you can select a drying time from 10 minutes to 130 minutes (*2.10*).

Every time you press this button the drying time increases by 5 mins. Press then button **8** to start the programme. The selected drying time on the display decreases by one unit every minute.

Note!
The programme time will automatically increase by up to 2 minutes, this is quite normal.

Note! The different type of cottons (towelling, sheets, shirts, and so on) or eventual laundry rolling up during spinning phase may cause a not uniform dryness. So, in the exceptional case that at the end of the cycle the laundry remains slightly wet, we suggest you to stretch the items rolled up out, to redistribute evenly the laundry in the drum and to select an additional drying cycle of 20-30 minutes.

Downloaded From WashingMachine-Manual.com Manuals

At the end of the programme

At the end of the drying programme, some acoustic signals sound. A blinking «0» appears on the display, the pilot light **10.2** and **10.3** and the light of the button **8** go off. At this point, begins an anti-crease phase which lasts about 10 minutes. During this time the door is locked.

Note!
If you whish to open the door before or during the anti-crease phase or to interrupt it, press any button or turn the programme selector dial to any programme position (except «O/OFF»), the door can be opened. Turn the selector dial to the «O/OFF» position to switch the machine off. Remove the laundry.

Automatic washing and drying (NON-STOP programme)

For NON-STOP programmes, the recommended load size is 3 kg for cotton and 2 kg for synthetics.
Note! It is possible also to dry up to 4 kg of cotton items (see the drying time table).
Do not use a dosing device/ball when carrying out a washing and drying programme.

Select the washing and the drying programme by turning the programme selector dial (1) and button 6

Switch the machine on by turning the selector dial to the selected washing programme/temperature and press the buttons corresponding to the required options. When selecting an «autodrying programme» the pilot lights **10.1** and **10.2** illuminate. If you press button **6** the DRYING TIME value appears on the display for a few seconds, then the entire duration of the washing and drying cycle appears again.

If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy.
In any case the reduction of the spin speed is only possible after selecting drying. The lowest values you can select are the following: with drying time 900 r.p.m. for cottons and 700 r.p.m. for synthetics. Select the drying time suitable to your laundry and start the programme by pressing button **8**.
At the end of the programme, follow the instructions given in the corresponding previous chapter.

Downloaded From WashingMachine-Manual.com Manuals

Washing programmes

Programme/ Temperature	Type of laundry	Options	Description of the programme
COTTON / LINEN 95° - 60°	**White cotton** (normally soiled cotton items)	SPIN REDUCTION/ RINSE HOLD TIME SAVING (**), STAIN, EXTRA RINSE	Main wash, Rinses Long spin Max Load: Kg 6 **Reduced Load: Kg 3
40 ECO 40°	**White and coloured cotton or mixed fabrics** normally soiled	SPIN REDUCTION/ RINSE HOLD, STAIN, EXTRA RINSE	Main wash, Rinses Long spin at maximum speed Max Load: Kg 6
COTTON COLOUR 60° - 40° - 30°	**White and coloured cotton** (normally soiled cotton items)	SPIN REDUCTION/ RINSE HOLD TIME SAVING (**), STAIN (*), EXTRA RINSE	Main wash, Rinses Long spin at maximum speed Max Load: Kg 6 **Reduced Load: Kg 3
COTTON + PREWASHING 95° - 60° - 40°	**White and cotton colour** (heavily soiled cotton items)	SPIN REDUCTION/ RINSE HOLD TIME SAVING (**), EXTRA RINSE	Prewash, Main wash, Rinses Long spin at maximum speed Max Load Kg 6 **Reduced Load: Kg 3
SYNTHETICS 60° - 50° - 40° - 30°	**Synthetic or mixed fabrics**	SPIN REDUCTION/ RINSE HOLD TIME SAVING (**), STAIN (*), EXTRA RINSE	Main wash Rinses Short spin Max Load Kg 3 **Reduced Load: Kg 1.5
EASY IRON PLUS 40°	**Synthetic or mixed fabrics** to be ironed	SPIN REDUCTION/ RINSE HOLD EXTRA RINSE	Main wash Rinses Short spin Max Load Kg 1

* Stain option can be selected only at the temperature of 40°C or higher.

** If you select the SUPER QUICK option by pressing the button **4** we recommend you to reduce the maximum load as indicated in the table above. Full loading possible however with somewaht reduced cleaning results.

Downloaded From WashingMachine-Manual.com Manuals

Washing programmes

Programme/ Temperature	Type of laundry	Options	Description of the programme
DELICATES 40° - 30°	**Delicate fabrics**: for example curtains	SPIN REDUCTION/ RINSE HOLD TIME SAVING (**), STAIN (*), EXTRA RINSE	Main wash Rinses Short spin Max Load Kg 3 ** Red. Load Kg 1.5
WOOL PLUS **30° - Cold**	Garments bearing the «Pure new wool, non-shrink, machine washable» or «Handwash» label	SPIN REDUCTION/ RINSE HOLD	Main wash Rinses Short spin Max Load Kg 2
DELICATE RINSES	Separate rinse cycle for hand washed items	SPIN REDUCTION/ RINSE HOLD EXTRA RINSE	Rinses Short spin Max Load Kg 6
DRAIN	For emptying out the water		Drain Max Load Kg 6
SPIN	Separate spin for cottons	SPIN REDUCTION	Drain and long spin at maximum speed Max Load Kg 6
REFRESH 30°	For slightly soiled fabrics, except wool	SPIN REDUCTION	Main wash Rinses Short spin Max Load Kg 2
ECONOMY 60°	**White and fast coloured cotton - economy**, lightly-normally soiled items	SPIN REDUCTION/ RINSE HOLD STAIN, EXTRA RINSE	Main wash Rinses Long spin at maximum speed Max Load Kg 6
O/OFF	For cancelling the programme which is running or to switch the machine off		

Downloaded From WashingMachine-Manual.com Manuals

Programme information

40 ECO	Special programme for white and coloured cotton suitable for different washing temperatures. This programme can be used for laundry, which should be washed at 40°C or 60°C separately. So, you can put into the drum the maximum load capacity in order to save energy and water. You will obtain the same good washing result as a normal programme at 60°C.
EASY IRON PLUS	Selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.
WOOL/ SILK HANDWASH	Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics with the «hand washing» care symbol. **Note**: A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning programme
REFRESH	Special program at 30°C, duration - approx. 30 minutes, ideal for laundry to be refreshed: e.g. a sport jacket worn only once or slightly soiled or new garments.
ECONOMY	This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency whilst saving energy.
DELICATE RINSES	With this programme it is possible to rinse and spin garments which have been washed by hand. The machine performs 3 rinses, followed by a final short spin. The spin speed can be reduced by relevant button.
DRAIN	For emptying out the water of the last rinse in programmes with the RINSE HOLD option. Before selecting this programme the selector dial must be turned to O.
SPIN	Separate spin for hand washed cotton items and after programmes with the RINSE HOLD option. Before selecting this programme the selector dial must be turned to O. You can choose the speed by pressing the relevant button to adapt it to the fabrics to be spun.

Downloaded From WashingMachine-Manual.com Manuals

Drying time

Degree of drying	Type of fabric	Max load	Spin Speed	Suggested drying time in mins
Suitable for items to put away without ironing	**Cotton and linen** (bathrobes, bath towels, etc)	4 kg	**1200**	170 - 190
			1400	150 - 170
		3 kg	**1200**	110 - 120
			1400	100 - 110
		1.5 kg	**1200**	75 - 85
			1400	65 - 75
	Synthetics and mixed fabrics	2 kg	**1200**	90 - 100
		1 kg	**1200**	55 - 65
Suitable for ironing	**Cotton and linen** (sheets, tablecloths, shirts, etc.)	4 kg	**1200**	140 - 160
			1400	120 - 140
		3 kg	**1200**	90 - 100
			1400	80 - 90
		1.5 kg	**1200**	60 - 70
			1400	50 - 60

In compliance with EC directive EN 50229 the cotton reference programme for the data entered in the Energy Label must be tested dividing the maximum washing load by two equal parts and drying with DRYING TIME each of them.

Downloaded From WashingMachine-Manual.com Manuals

Preparing the wash cycle

Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

Temperatures

95° or 90°	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...).
60°/50°	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).
40°-30°- Cold	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink».

Before loading the laundry

Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Maximum loads

Recommended loads are indicated in the washing programme charts.

General rules:

Cotton, linen: drum full but not too tightly packed;

Synthetics: drum no more than half full;

Delicate fabrics and woollens: drum no more than one third full.

Downloaded From WashingMachine-Manual.com Manuals

Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size.

Laundry weights

The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

Mould stains: treat with bleach, rinse well (whites and fast coloureds only).

Grass: soap lightly and treat with bleach (whites and fast coloureds only).

Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain.

Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.

Downloaded From WashingMachine-Manual.com Manuals

Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(*) do not use acetone on artificial silk.

Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washer-dryer detergents may be used in this appliance:

- powder detergents for all types of fabric,
- powder detergents for delicate fabrics (60°C max) and woollens,
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using liquid detergents, a programme **without** prewash must be selected.

The washer-dryer incorporates a recirculation system which allows an optimal use of the concentrated detergent.

Pour liquid detergent into the dispenser drawer compartment marked **just before** starting the programme.

Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme.

Follow the product manufacturers' recommendations on quantities to use and **do not exceed the «MAX» mark in the detergent dispenser drawer.**

Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Follow the product manufacturers' instructions on quantities to use.

Downloaded From WashingMachine-Manual.com Manuals

Use less detergent if:

- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam form during washing. For the stain treatment before the washing cycl, follow the product manufacturers' instructions on detergent quantities. If you use any specific product to remove the stains, you must start the cycle of washing immediately .

Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

Level	Characteristic	Degrees of water hardness	
		German °dH	French °T.H.
1	soft	0-7	0-15
2	medium	8-14	16-25
3	hard	15-21	26-37
4	very hard	> 21	> 37

Note: A water softener must be added when water has a medium-high degree of hardness (from degree of hardness II). Follow the manufacturer's instructions. The quantity of detergent can then always be adjusted to degree of hardness I (= soft).

Preparing the drying cycle

As a dryer, the machine works on the condensation principle.

Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.

Attention!

Before starting the drying programme, reduce the loads of washed laundry, in order to obtain good performances.

Laundry not suitable for drying

- Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried.

Downloaded From WashingMachine-Manual.com Manuals

- Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.
- Remove the laundry when the appliance has finished drying.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.
- Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

Gargment's labels

For drying, follow the indications given on the manufacturer's labels:

May be tumble dried

Drying at high temperature

Drying at reduced temperature

Do not tumble dry.

Drying cycle duration

The drying time may vary depending on:

- speed of the final spin
- dryness degree required (iron dry, store dry)
- type of laundry
- wheight of the load size

The average drying time for a timed drying are indicated in the «Drying Time» chapter. The experience will help you to dry your laundry in a more suitable way, according to the different fabrics. Take note of the duration drying time of the already performed cycles.

Additional drying

If the laundry is till dump at the end of the drying programme, select again a short drying.

Attention! Do not over dry the laundry in order to avoid creasing of fabrics or garment's shrinking .

Downloaded From WashingMachine-Manual.com Manuals

Care and cleaning

You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions.

This will help to prevent the formation of lime deposits.

After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

Maintenance wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.

External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.
Important! Do not use methylated spirits, solvents or similar products to clean the cabinet.

Detergent dispenser drawer

The detergent dispenser drawer should be cleaned regularly.

1. Remove the detergent dispenser drawer by pressing the catch downwards and by pulling it out. To aid cleaning, the top part of the additive compartment should be removed.

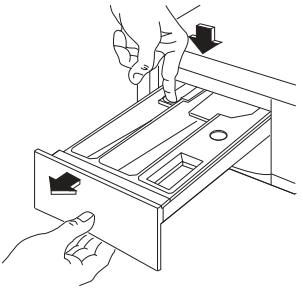

Downloaded From WashingMachine-Manual.com Manuals

2. Flush it out under a tap, to remove any traces of accumulated powder.

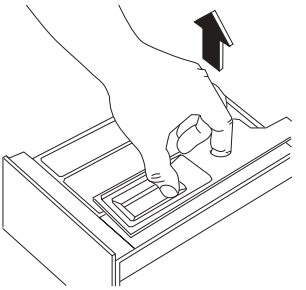

3. Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.
4. Replace the drawer and run the rinse programme without any clothes in the drum.

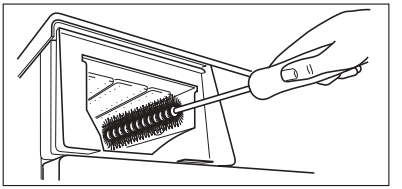

Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.

Important! Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues. Programme: COTTONS/LINEN 90° or 95°C, press button **4**, add approx. 1/4 measuring cup of detergent.

Door seal

Check from time to time the door seal and eliminate eventual possible objects that could be trapped in the fold.

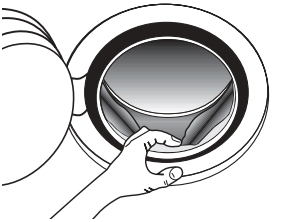

Drain pump

The pump should be inspected regularly and particularly if

- the machine does not empty and/or spin
- the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Downloaded From WashingMachine-Manual.com Manuals

Proceed as follows:

1. Disconnect the appliance.
2. If necessary wait until the water has cooled down.
3. Place a container close to the pump (**A**) to collect any spillage.
4. Release the emergency emptying hose (**B**), place it in the container and remove its cap.
5. When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump.

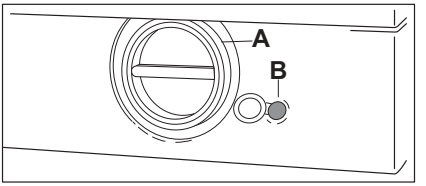

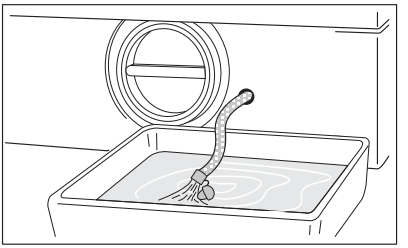

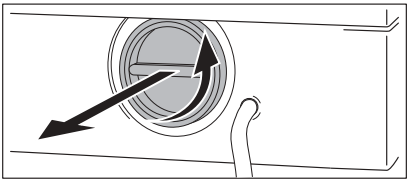

6. Remove any objects from the pump impeller by rotating it.

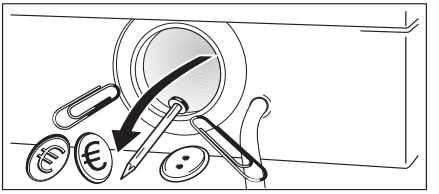

7. Replace the cap on the emergency emptying hose and place the latter back in its seat.
8. Screw the pump cover fully in.

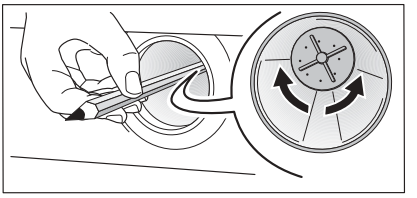

Warning!

When the appliance is in use and depending on the programme selected there can be hot water in the pump.

Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

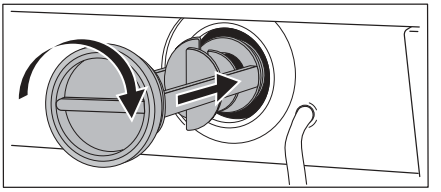

Downloaded From WashingMachine-Manual.com Manuals

Water inlet filter

If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked.

1. Turn off the water tap.
2. Unscrew the hose from the tap.
3. Clean the filter in the hose with a stiff brush.
4. Screw the hose back onto the tap.

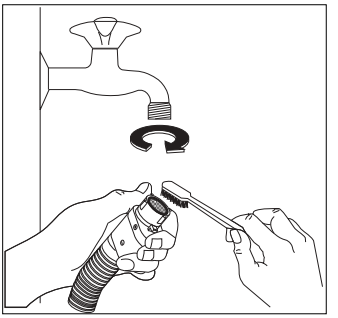

Emergency emptying out

If the water is not discharged, proceed as follows to empty out the machine:

1. pull out the plug from the power socket;

2. close the water tap;

3. if necessary, wait until the water has cooled down;

4. place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. Whem the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out;

5. clean the pump if necessary as previously described;

6. replace the emergency emptying hose in its seat after having plugged it;

7. screw the pump cover again.

Downloaded From WashingMachine-Manual.com Manuals

Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows:

1. Close the water tap and unscrew the water inlet hose from the tap.
2. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.
3. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.

By doing this, any water remaining in the machine is removed, preventing ice forming and consequently damage to the appliance.

When you use the machine again, make sure that the ambient temperature is above 0°C.

Downloaded From WashingMachine-Manual.com Manuals

What to do if...

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the yellow pilot light of button **8** blinks, one of the following alarm codes appears on the display and at the same some acoustic signals sound every 20 seconds to indicate that the machine is not working:

- *E10* : problem with the water supply
- *E20* : problem with the water draining
- *E40* : door open.

Once the problem has been eliminated, press button **8** to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible cause/Solution
The washer-dryer does not start:	The door has not been closed. *E40* • Close firmly the door. The plug is not properly inserted in the power socket. • Insert the plug into the power socket. There is no power at the socket. • Please check your domestic electrical installation. The main fuse or the fuse in the plug has blown. • Replace the fuse. The selector dial is not correctly positioned and the button **8** has not been depressed. • Please turn the selector dial and press button **8** again. The delay start has been selected. • If the laundry is to be washed immediately, cancel the delay start. The Child safety lock has been activated. • Deactivated this device.
The machine does not fill:	The water tap is closed. *E10* • Open the water tap. The inlet hose is squashed or kinked. *E10* • Check the inlet hose connection. The filter in the inlet hose is blocked. *E10* • Clean the water inlet hose filter. The door is not properly closed. *E40* • Close the door firmly.

Downloaded From WashingMachine-Manual.com Manuals

Problem	Possible cause/Solution
The machine fills then empties immediately:	The end of the drain hose is too low. • Refer to relevant paragraph in «water drainage» section.
The machine does not empty and/or does not spin:	The drain hose is squashed or kinked. *E20* • Check the drain hose connection. The drain filter is clogged. *E20* • Clean the drain filter. An option/programme that ends with the water still in the tub or eliminates all the spinning phases has been selected. • Select the draining or the spinning programme. The laundry is not evenly distributed in the drum. • Redistribute the laundry.
There is water on the floor:	Too much detergent or unsuitable detergent (creates too much foam) has been used. • Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. • Check the water inlet hose connection. The inlet/drain hose is damaged. • Replace it with a new one. The cap on the emergency emptying hose has not been replaced or the filter has not been properly screwed in after cleaning action. • Refit the cap on the emergency emptying hose or screw the filter fully in.
Unsatisfactory washing results:	Too little detergent or unsuitable detergent has been used. • Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. • Use commercial products to treat the stubborn stains. The correct temperature was not selected. • Check if you have selected the correct temperature. Excessive laundry load. • Reduce the laundry load.

Downloaded From WashingMachine-Manual.com Manuals

Problem	Cause possible/Solution
The door will not open:	The programme is still running. • Wait the end of washing cycle. The door lock has not been released. • Wait until the pilot light **10.3** goes off. There is water in the drum. • Select drain or spin programme to empty out the water.
The machine vibrates or is noisy:	The transit bolts and packing have not been removed. • Check the correct installation of the appliance. The support feet have not been adjusted • Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. • Redistribute the laundry. Maybe there is very little laundry in the drum. • Load more laundry.
Spinning starts late or the machine does not spin:	The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after some minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. • Redistribute the laundry. The load is too small. • Add more items, redistribute the load manually and then select the spinning programme.
The machine does not dry or does not dry properly	The drying time has not been selected. • Select the drying time. The water tap is not turned on (*E10*). • Open the water tap. The drain filter is clogged (*E20*). • Clean the drain filter. The machine is overloaded. • Introduce into the drum less laundry. The selected drying programme or time was not suitable for the laundry. • Select the suitable drying programme or time for the laundry.
No water is visible in the drum:	Machines based on modern technology operate very economically using very little water without affecting performance.

Downloaded From WashingMachine-Manual.com Manuals

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

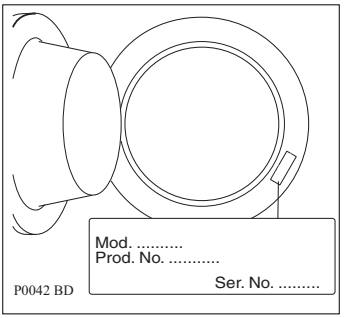

Technical Data

Dimensions	Width Height Depth (door included)	60 cm 82 cm 54 cm
Electrical connection	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.	
Water supply pressure	Minimum Maximum	0,05 MPa 0,8 MPa
Maximum Load	Cottons	6 kg
Maximum Dry Load	Cotton Cotton Big capacity Synthetics	3 kg 4 kg 2 kg
Spin Speed	Maximum	1200 rpm (L 11842 VIT) 1400 rpm (L 12843 VIT)

Downloaded From WashingMachine-Manual.com Manuals

Consumption value

Programme	Water consumption (litres)	Energy consumption (KWh)	Programme duration (Minutes)
White Cottons 95°	57	2.1	For the duration of the programmes, please refer to the display on the control panel.
Cottons 60°	53	1.2	
(*) Cotton ECONOMY 60°	42	1.02	
Cottons 40°	53	0.9	
Synthetics 60°	44	0.9	
Delicates 40°	56	0.55	
Wool (Handwash) 30°	58	0.25	

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

(*) «Economy 60°C» with a load of 6 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

Downloaded From WashingMachine-Manual.com Manuals

Installation

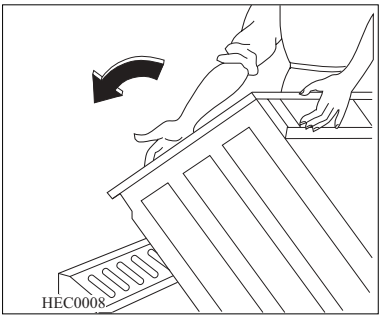

Unpacking

All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

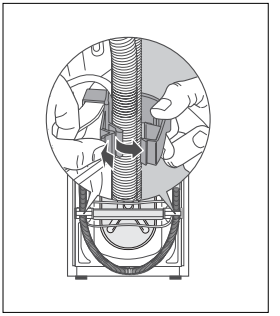

2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

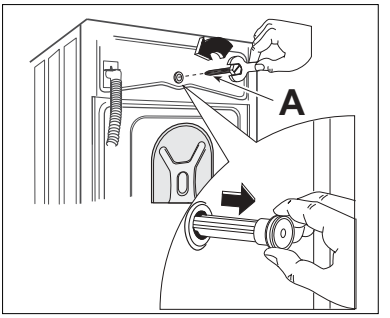

3. With the supplied spanner unscrew and remove the central rear bolt **A.**

Downloaded From WashingMachine-Manual.com Manuals

4. Unscrew and remove the two large rear bolts **B** and the six smaller bolts **C**.

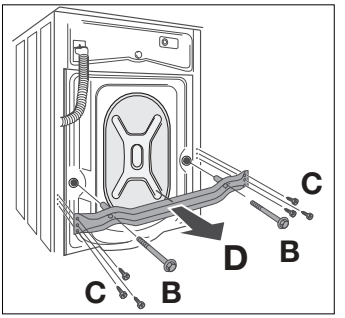

5. Remove the bracket **D** and refit the six smaller bolts **C**. Slide out the relevant plastic spacer **E.**

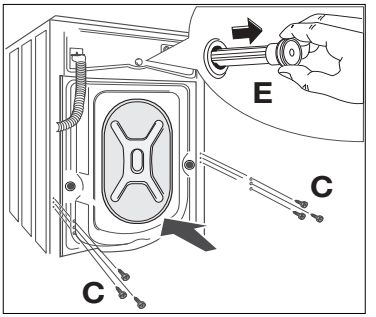

6. Open the porthole, take out the inlet hose from the drum.

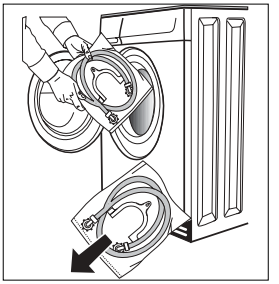

7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.
8. Connect the water inlet hose as described under the paragraph «Water inlet».

All the different plug caps are supplied with the appliance in the plastic bag containing the instruction booklet.

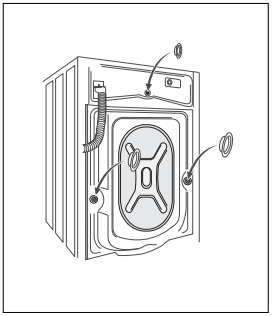

Downloaded From WashingMachine-Manual.com Manuals

Positioning and levelling

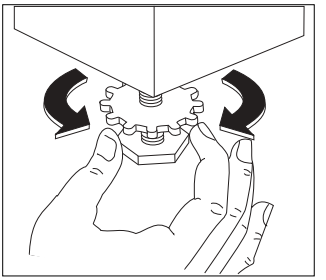

Install the machine on a flat hard floor.

Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

Before placing it on small tiles, apply a rubber coating.

Never try to correct any unevenness in the floor by putting pieces of wood, cardboard or similar materials under the machine.

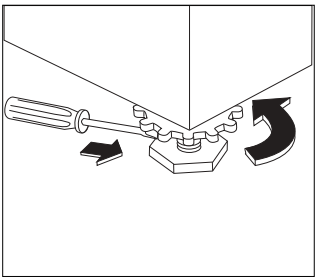

If it is impossible to avoid positioning the machine next to a gas cooker or coal-burning stove, an insulating panel covered with aluminium foil on the side facing the cooker or stove, must be inserted between the two appliances.

The machine must not be installed in rooms where the temperature can drop below 0.

The water inlet hose and the drain hose must not be kinked.

Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. After having levelled the machine, tighen the lock nuts.

Water inlet

An inlet hose is supplied and can be found inside the machine drum.

Do not use the hose from your previous machine to connect to the water supply.

This appliance must be connected to a cold water supply.

1. Open the porthole and extract the inlet hose.
2. Connect the hose with the angled connection to the machine.

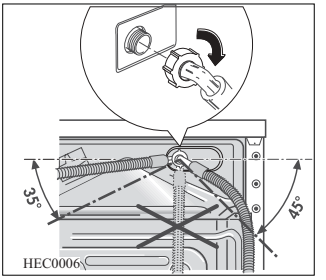

⚠ **Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.**

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

Downloaded From Washingmachine-Manual.com Manuals

4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

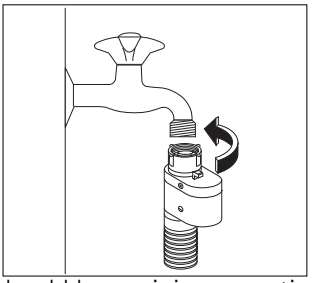

Installation should comply with local water authority and building regulations requirements. A minimum water pressure of 0.05 MPa is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum vertical distance of between the appliance's inlet and the bottom of the water storage tank.

Water-stop device

The inlet hose is provided with a water stop device, which protects against damage caused by water leaks in the hose which could develop due to natural ageing of the hose. This fault is shown by a red sector in the window "**A**". Should this occur, turn the water tap off and refer to your Service Centre to replace the hose.

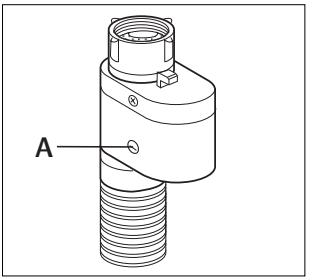

Water drainage

The end of the drain hose can be positioned in three ways:

Hooked over the edge of a sink using the plastic hose guide supplied with the machine.

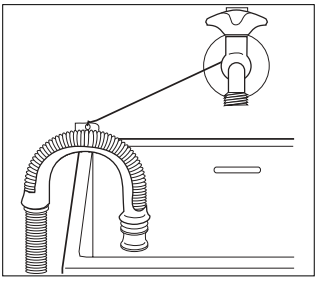

In this case, make sure the end cannot come unhooked when the machine is emptying.

This could be done by tying it to the tap with a piece of string or attaching it to the wall.

In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground.

Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be **ventilated**, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

Downloaded From WashingMachine-Manual.com Manuals

The drain hose must not be kinked.

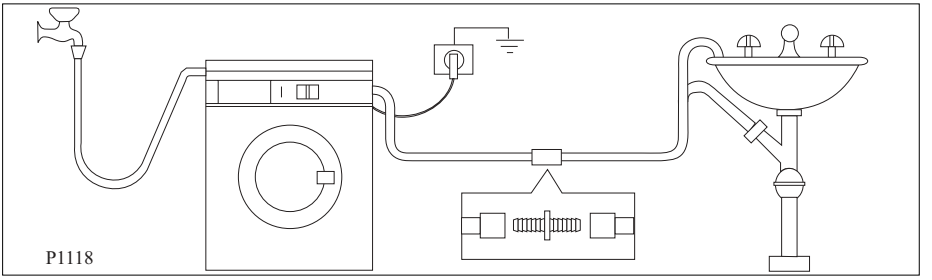

Important!

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.

Electrical connection

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.

Connect the machine to an earthed socket.

The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.

The power supply cable must be easily accessible after installing the machine.

Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.

Permanent connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.
The switch must not break the yellow and green earth cable at any point.
This operation must be performed by a qualified electrician.

The power supply cable must be easily accessible after installing the machine.

Downloaded From WashingMachine-Manual.com Manuals

Building-in

This appliance has been designed to be built into the kitchen furniture.
The recess should have the dimensions shown in picture **A**.

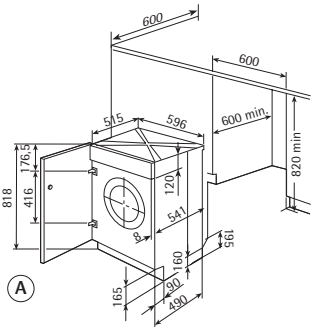

Preparation and assembly of the door

The machine is originally pre-arranged for the assembly of a door opening from right to left.
In this case it is sufficient to screw in the hinges (1) and the counter-magnet (6) provided with the appliance, at the right level (Fig. **B**).

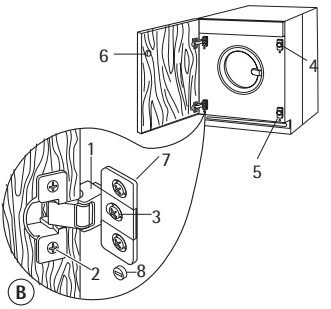

a) Door

The dimensions of the door should be:
- width 595-598 mm
- thickness 16-22 mm

The height (C-Fig. C) depends on the height of the adjacent furniture's base.

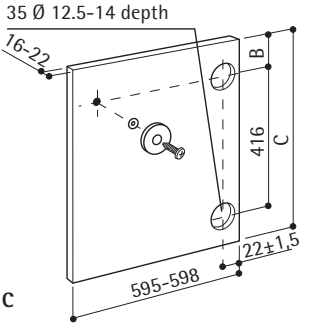

b) Hinges

To mount the hinges it is necessary to drill two holes (dia. 35 mm, depth 12.5-14 mm depending on the depth of door furniture) on the inner side of the door. The distance between the holes hobs fixing centres must be 416 mm.
The distance (**B**) from upper edge of the door to the centre of the hole depends on the adjacent furniture's dimensions.
The required dimensions are given in the picture **C**.
The hinges will be fixed to the door by means of screws for wood (2-Fig. **B**) supplied with the appliance.

Downloaded From WashingMachine-Manual.com Manuals

c) Mounting the door

Fix the hinges (1) to the machine by means of the M5x15 screws (3-Fig. **B**). The hinges can be adjusted to compensate for possible uneven thickness of the door. To align the door perfectly it is necessary to loosen the screw (3-Fig. **B**), adjust the door and tighten the screw again.

d) Counter-magnet (6)

The appliance is pre-arranged for a magnetic closure of the door. To enable a correct operation of this device, it is necessary to screw the counter-magnet (6) (steel disk + rubber ring) into the inner side of the door.
Its position must correspond to the magnet (4) on the appliance (see picture **D**).

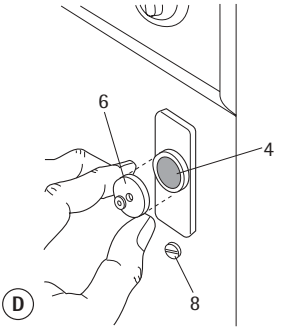

If the door has to be opened from left to right, invert the position of the plates (7), the magnet (4) and the plate (5) (Fig. **B** and **E**). Mount the countermagnet (6) and the hinges (1) as previously described.

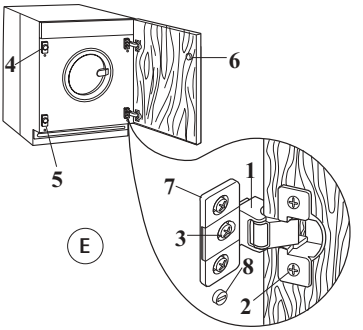

Downloaded From WashingMachine-Manual.com Manuals

Environment concerns

Packaging materials

The materials marked with the symbol ♺ are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

Downloaded From WashingMachine-Manual.com Manuals

www.electrolux.com

www.aeg-electrolux.com

CE

132 962 910-00-322008 Subject to change without notice

PERFEKT IN FORM UND FUNKTION

AEG

Electrolux

Downloaded From WashingMachine-Manual.com Manuals